



USER INSTRUCTIONS

Nautilus P2.5 Handle Position and Valve Routing Information

GREEN HANDLE: Receives water from water inlet on front of panel

Sideways - water goes from inlet to pump



Down – water goes to fresh water tank



BLUE HANDLE: Receives water from the white handle valve/water inlet on front of panel

Sideways - water goes to fixtures (cold)



Down – water goes to or come from fresh water tank

