




Installation Instructions




CAUTION: Improper installation will result in poor product performance.

- Proper crimping of Oetiker clamp is required for appropriate attachment.
- Failure to follow these instructions for installation of our product will forfeit any warranty consideration.

1. Cut a 1 3/4" hole in sidewall and feed vent hose through hole.

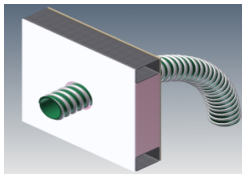


2. Slide Oetiker clamp (p/n OET 38.1) onto vent hose.

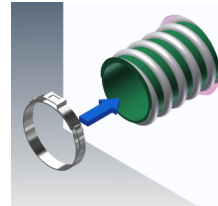


3. Insert Power Vent base (B&B p/n 201-031-00001) into vent hose (arrow pointing up) and properly crimp Oetiker clamp.


IMPORTANT!
Check for secure
connection between
base and hose

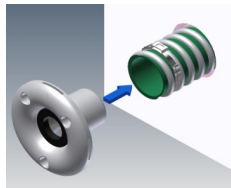


4. Feed Power Vent base into hole and attach to sidewall with (3) #8 self-tapping screws.

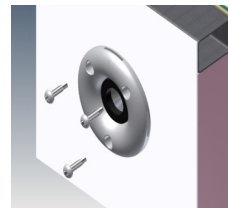

5. Slide Power Vent hood (B&B p/n 201-031-00002) onto Power Vent base, making sure side tabs lock into place.

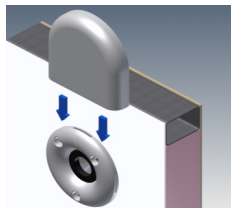

6. Cap seal edges with caulk for waterproofing.

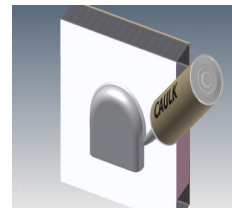

58471 Fir Road, Mishawaka, IN 46544
Phone: (574) 259-7838 Fax: (574) 259-7939
www.bandbmolders.com